

Shock sensor alarm

Software installation guide

Contact Information

Email: info@laboratories.cz

Web: laboratories.cz



Contents

Driver installation.....	3
Shock Alarm software installation.....	7
Shock Alarm Supervisor software installation.....	10

Driver installation

1. Connect sensor device to USB port on your computer and wait. "Found New Hardware" message appears with "AVR309:USB to UART protocol converter" name.




2. Window "Found New Hardware Wizard" will be opened. Choose "Install from a list or specific location (Advanced)" and click "Next".






3. Check "Include this location in the search" and "Browse" to the folder where driver files are stored.

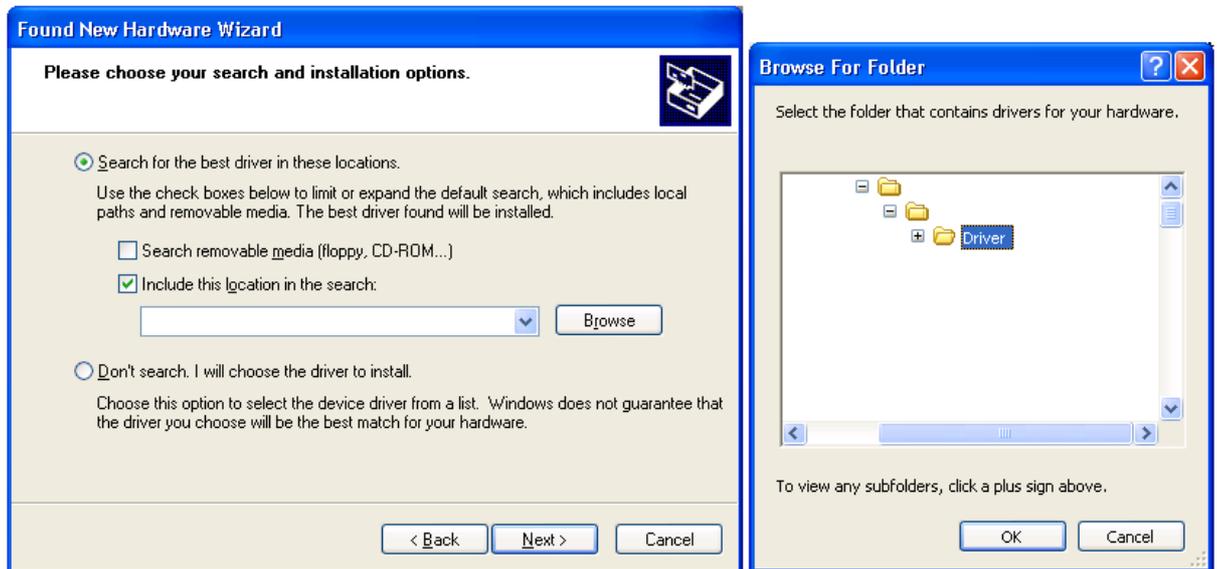

4. Click "Next".
5. The window with device AVR309:USB to UART protocol converter appears.

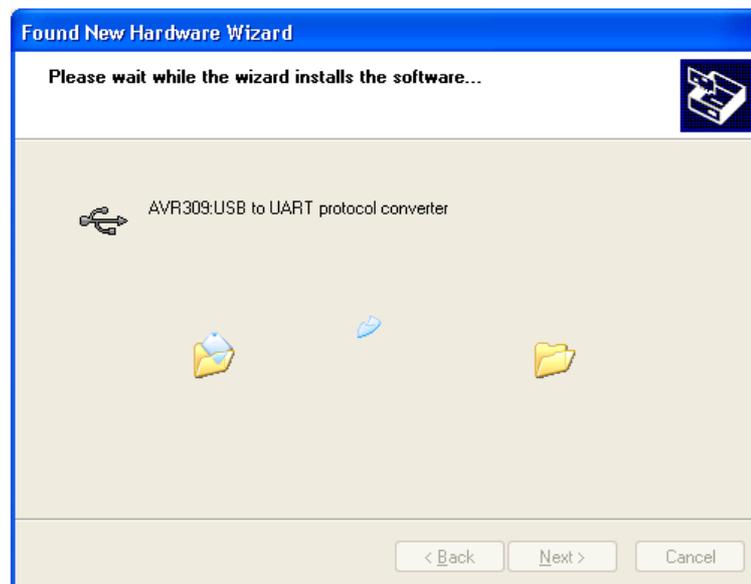

6. If the warning window "Hardware Installation" appears, choose "Continue Anyway".



7. The Windows will now install driver files and make system changes.




8. The installation process is complete. Click "Finish".



9. After successful installation the small window with confirmation of installation appears.



10. Check if the device „AVR309:USB to UART protocol converter" is present in Device Manager.

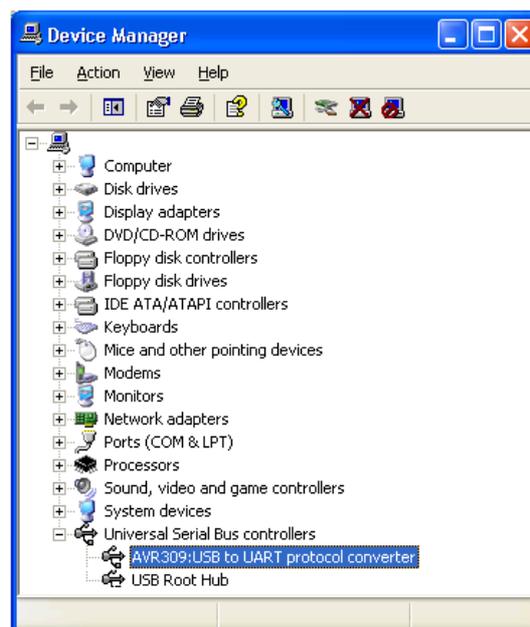

11. Device driver was successfully installed.




Shock Alarm software installation

Prerequisites: .NET Framework 2.0 installed on the target computer.


1. Run the ShockAlarm installation file.

ShockAlarmInstalator.msi

2. Welcome window appears. Click "Next".

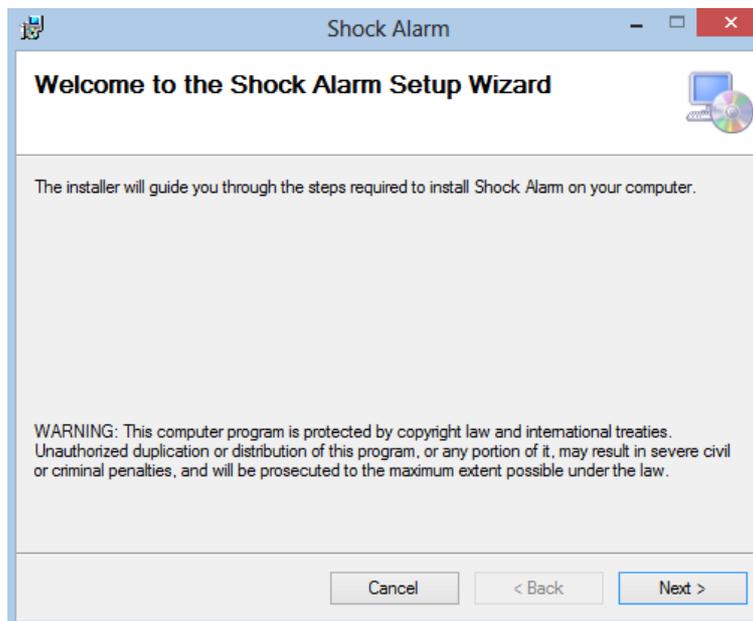


3. In the "Select Installation Folder" window set an installation folder and click "Next".

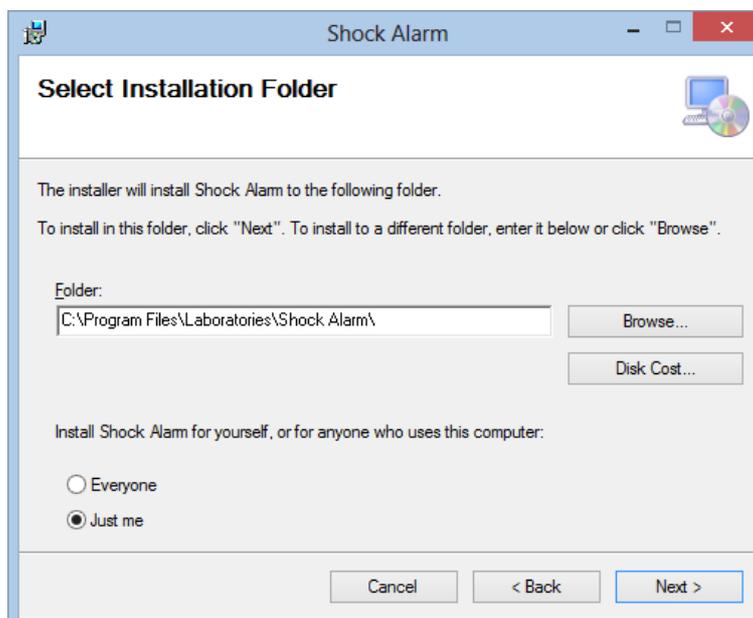





4. In the “Confirm Installation” window click “Next”.

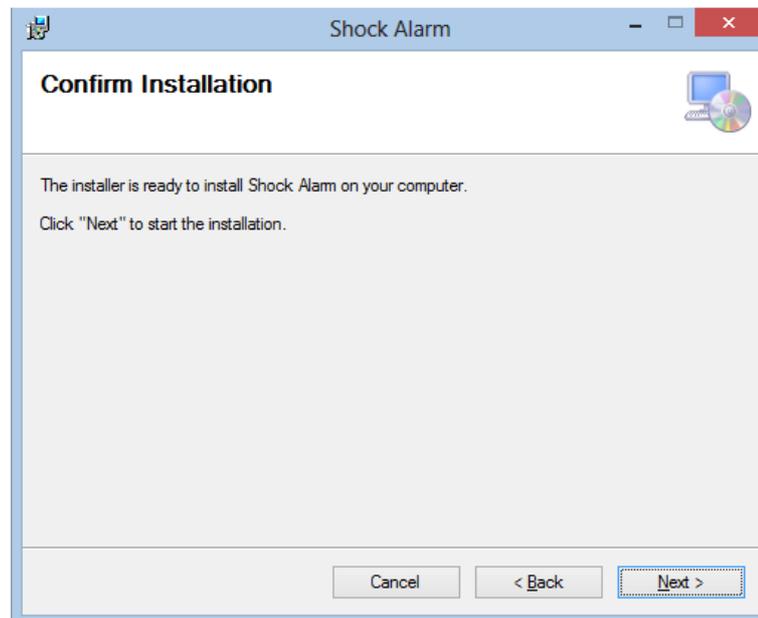

5. If the “User Account Control” message appears, click “Yes”.

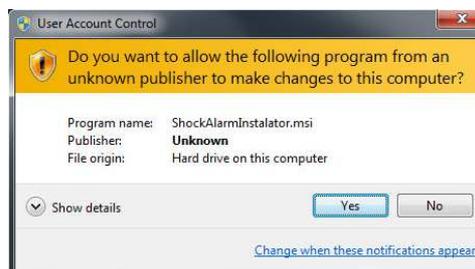

6. The “Installation Complete” window appears. Click “Close”.

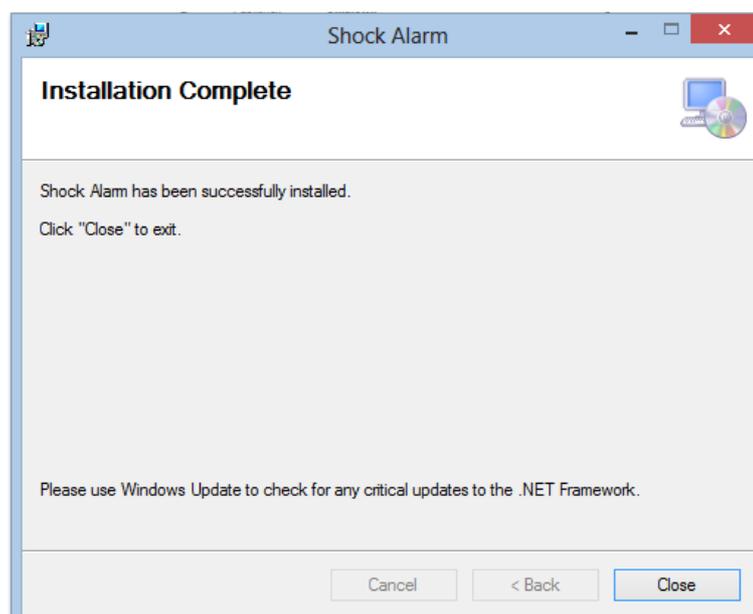



7. Run the Shock Alarm application from Windows desktop.






Shock Alarm Supervisor software installation

Prerequisites: .NET Framework 4.0 installed on the target computer.


1. Run the ShockAlarm Supervisor installation file.

ShockAlarmSupervisorInstalator.msi

2. Welcome window appears. Click "Next".

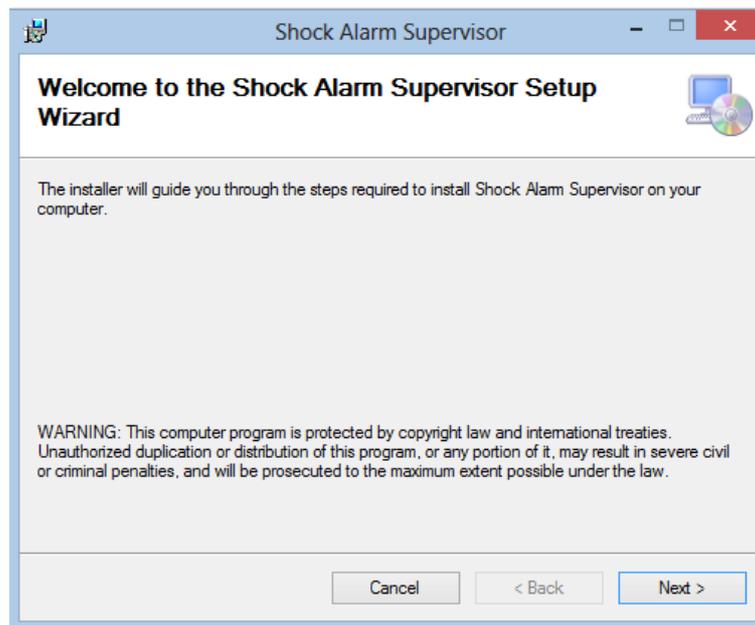


3. In the "Select Installation Folder" window set an installation folder and click "Next".

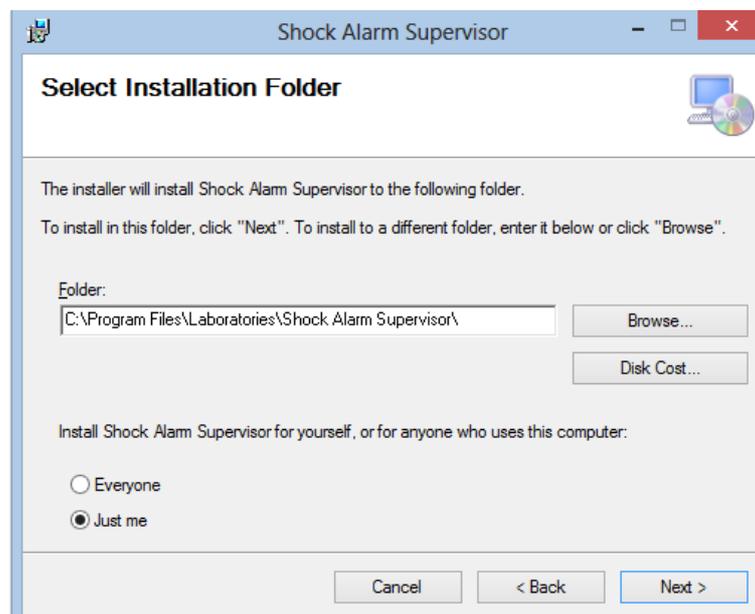





4. In the “Confirm Installation” window click “Next”.

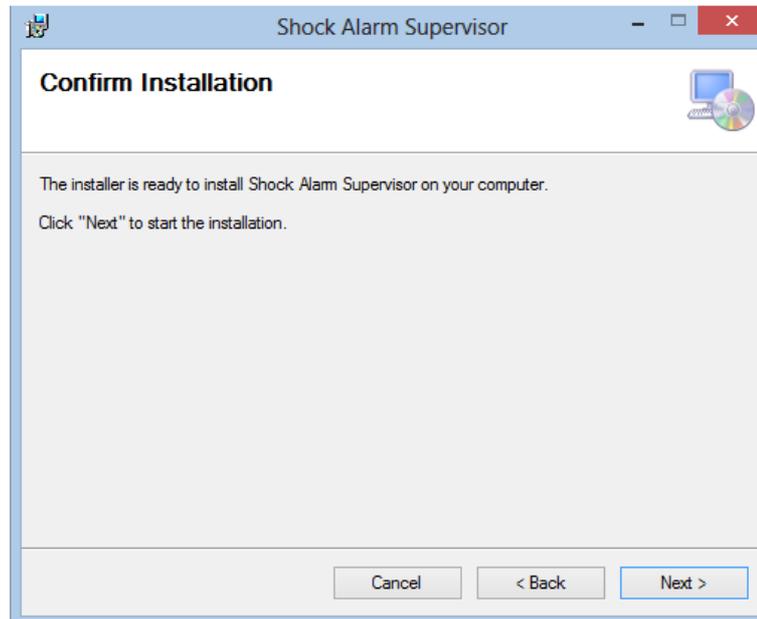

5. If the “User Account Control” message appears, click “Yes”.

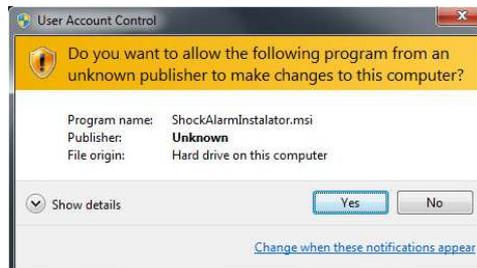

6. The “Installation Complete” window appears. Click “Close”.

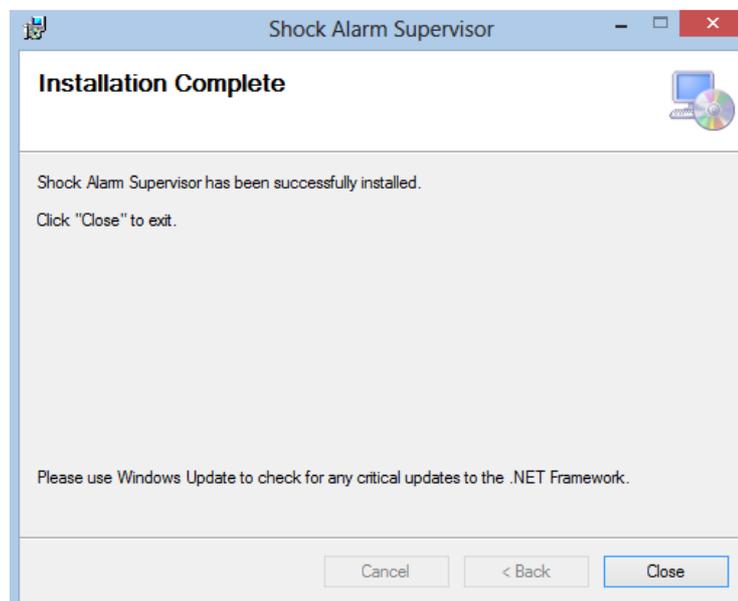



7. Run the Shock Alarm Supervisor application from Windows desktop.



In case of any problems, please contact technical support Laboratories s.r.o.
E-mail: info@laboratories.cz